

## Authentication

Before setting up the file server it is important to understand that the UCS firmware is pre-programmed with a default username and password which is used during authentication to the provisioning server. The default credentials use the same string for both the username and password and are stored in as case-sensitive so if the FTP server uses case-sensitive username and/or password make sure the uppercase and lowercase characters are used correctly. (Traditionally username are not case-sensitive while passwords are, but this may depend on the actual file server product used.)

Username	P1cmSpIp
Password	P1cmSpIp

It can be difficult to discern if some of these characters are an i, L, or a 1. The leading 'p' is uppercase, followed by a lowercase 'L' 'c' 'm', then an uppercase 's', lowercase 'p', uppercase 'i', lowercase 'p'. The name comes from the string 'Polycom Soundpoint Ip'.